ADDENDUM
2.4 GHz Wireless Color System
49-2535/2536

1. Remove the clear lens cover.

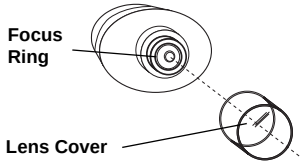

2. Turn the black focus ring counterclockwise.

   Note: The focus ring might be difficult to turn. Press down and squeeze while turning counterclockwise.

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

3. Once the focus ring turns freely, rotate it to adjust for best focus.

4. Replace the clear lens cover.

RadioShack Corporation
Fort Worth, Texas 76102

49-2535
03A01
Printed in USA